



PREMIUM JUICER

instruction manual & recipe guide

DASH



TM

bydash.com





PREMIUM JUICER

| | |
|----------------------|-------|
| Safety Guidelines | 4-5 |
| What's Inside | 6-7 |
| Using Your Juicer | 8-9 |
| Speed Settings | 10 |
| Safety Precautions | 11 |
| Cleaning Your Juicer | 12 |
| Recipes | 13-21 |
| Customer Support | 22 |
| Warranty | 23 |

IMPORTANT SAFETY GUIDELINES

Read all instructions carefully.

When using electrical appliances, basic safety precautions should be followed, especially the following:

- Read all instructions carefully.
- Remove all packaging and labels from appliance prior to use.
- To protect against risk of electrical shock do not put cord, plugs, or appliance in or near water or other liquid.
- Any maintenance other than cleaning please contact StoreBound toll free at 1-800-898-6970 from 7AM -7PM PST Monday through Friday or by email at info@storebound.com
- Keep appliance away from children when in use.
- Only use fruits and vegetables with this product, other food may damage the appliance.
- Unplug from outlet when not in use, during assembly, during disassembly, and before cleaning.
- Avoid contact with moving parts.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or is damaged in any manner.
- Use only attachments recommended or sold by the manufacturer - using other attachments may result in fire, electric shock, or injury.
- Do not use outdoors.
- Do not leave unattended when appliance is running.
- Do not let cord hang over edge of table, hang over edge of counter, or touch hot surfaces.
- Always make sure the Upper Housing Cover is locked securely in place before motor is engaged. Do not unlock Locking Arm before juicer has finished operation.
- Make sure to turn switch to 0 (off) position after each use of your juicer.
- Make sure the motor stops completely before disassembling.
- Do not put your fingers or other objects into the juicer while it is in operation. If food becomes lodged in the opening, use the Juice Pusher to move it through safely. If that doesn't work, use another piece of fruit or vegetable to move it through. When neither is possible, turn the motor off, unplug, and disassemble juicer to remove food blockage.

- Do not use the appliance if any parts are damaged.
- Do not use without the Pulp Container in place.
- Keep hands and utensils away from moving blades while processing food to reduce the risk of severe injury or damage to the juicer. A scraper may be used, but only when the juicer is off.
- Blades and the Cutting Disk are sharp. Handle carefully. Wash using brush or gloves. Do not touch small cutting blades in the base of the Cutting Disk.
- Do not place on or near a hot gas, hot electric burner, or in a heated oven.
- When cleaning, do not submerge the main base of the product (with electrical parts) in any liquid. Instead, use a soft damp cloth to wipe down.
- Be certain that the Upper Housing Cover is securely locked into place before engaging appliance.
- Never feed produce into the juicer by hand. Always use the Juice Pusher.
- Appliance is not intended for use by children.





DASH PREMIUM JUICER

Congratulations! We hope that you're excited to start making delicious, unprocessed juice at home with your new Dash Premium Juicer.



SETTING UP YOUR JUICER

Make sure to clean the juicer very carefully first before using.


1. Place the unplugged Powerful 800W Motor on a flat surface and place switch in 0 (off) position.
2. Place the Filter Housing on top of the Powerful 800W Motor (make sure the spout is resting in the groove).
3. Then attach the Cutting Disk to the Juice Outlet. Ensure that the three pegs line up with the three slots in the base and make sure to lock in place. Rotate slightly to make it move smoothly.
4. Place the Upper Housing Cover onto the Filter Housing. Use one hand to press down while using your other hand to lock the Locking Arm into place which will snap into the grooves of the Upper Housing Cover.
5. Place the Juice Pusher into the Feed Tube. The pusher arrow needs to line up with the Feed Tube notch.
6. Place the Pulp Container underneath the Upper Housing Cover. Tilt slightly when putting into position.
7. Attach the Juice Outlet to the nozzle on the Filter Housing. This will eliminate juice splashing.
8. Place the Juice Pitcher underneath the Juice Outlet.
9. Plug in the Juicer.
10. Always turn Juicer on before inserting any produce & beginning to juice.
11. You can use the Juice Outlet when juicing by the glass or with the Juice Pitcher.



health fact!

Many people think that calcium is only present in dairy. However, calcium is actually present in high amounts in citrus fruits as well.

SPEED SETTINGS

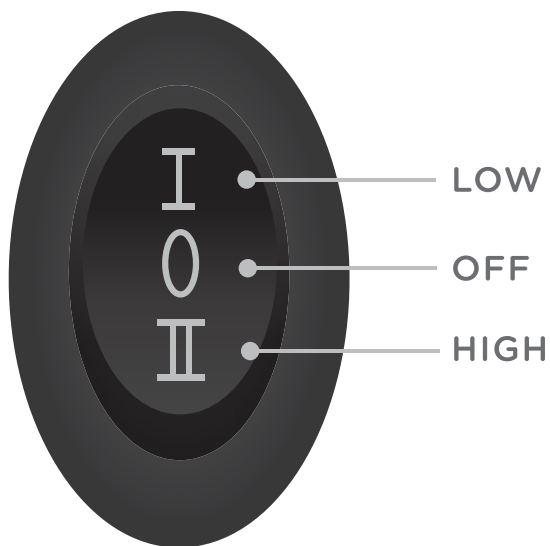

| | |
|------|----------------------------------|
| LOW | for softer fruits and vegetables |
| OFF | turns Juicer off |
| HIGH | for harder fruits and vegetables |

If you are unsure if the item you are juicing is hard or soft, use the High setting.

SAFETY WHILE USING

All food should be completely cleaned before being fed into the Feed Tube. For larger food, cut it into a more suitable size. For some fruits, remove the peel or rind.

- Only push food through the Feed Tube using the Juice Pusher.
- Do not use the Juicer for more than 5 minutes consecutively. Let the Juicer rest and reset for 5 minutes between uses.
- Do not put too much food in at any one time.
- When done juicing, make sure to turn the switch to the 0 (off) setting.
- When appliance has stopped, then it is safe to remove the Juice Pitcher.
- Make sure to unplug the Juicer when you have finished juicing.



MAINTENANCE

After each use, the Juicer should be cleaned properly. Keep the Juicer in a dry and well ventilated area. If not used for more than 3 days, make sure to wash the moving parts before next use.

IMPORTANT - DO NOT IMMERSE THE POWERFUL 800W MOTOR IN ANY LIQUID DURING CLEANING. ONLY USE A SOFT AND DAMP CLOTH TO WIPE DOWN ANY SURFACE. DO NOT PLACE ACCESSORIES INTO DISHWASHER. AFTER DRYING REASSEMBLE THE APPLIANCE. STORE IN A DRY, WELL VENTILATED AREA.

To clean your Juicer:

1. DISASSEMBLE

- Open the Locking Arm. Remove the Feed Tube, Upper Housing Cover, Filter Housing, Cutting Disk, and Pulp Container.
- Remove the Cutting Disk and Filter Housing together. Hold down base of Filter Housing and Juice Outlet while pulling up.
- Pull Froth Separator up from inside Juice Pitcher. It should slide out making it easier to clean with soap and water

2. DISCARD

- Discard the contents of the Pulp Container into a trashcan (can also be used as compost in your garden.)

3. CLEAN

- Use clean, warm water to wash all the non-electric parts.

4. DRY

- After washing, use a soft cloth to dry all surfaces.

A close-up photograph of a white ceramic bowl filled with fresh citrus fruits. In the foreground, a large, bright yellow lemon is prominent. Behind it, a green lime is visible, along with several oranges. Green leaves are interspersed among the fruits, adding a fresh touch. The background is softly blurred, showing more citrus fruits and leaves. An orange semi-transparent rectangular box is overlaid on the middle of the image, containing the text.

RECIPES

HEALTHY & TASTY JUICES

**MERRY BERRY**

1 apple
10 blueberries
10 strawberries
8 raspberries

POP'S PAPAYA

1 papaya
1 apple
1 kiwi
1 carrot

LEMON-LIME LOVE

½ lemon
½ lime
3 apples
1 tbsp agave



health fact!

Pomegranate, blueberry, acai berry, noni berry and cherry are rich in antioxidants & phytonutrients

**ORANGE-CARROT**

4 oranges
8 carrots

GRAPE-APPLE

3 granny smith apples
1 cup seedless grapes
1 lemon

RED ROCKET JUICE

1 cup raspberries
1 cup strawberries
2 oranges
2 red apples



health fact!

Carrots are rich in vitamin A, beta-carotene and lutein which are important for your vision - especially night vision.

**GREEN GIANT**

4 spinach leaves
2 celery stalks
1 handful parsley
4 carrots

CARROT TOP

3 carrots
 $\frac{1}{2}$ beet
 $\frac{1}{2}$ cucumber

APPLE-GINGER ZINGER

1 apple
2 carrots
1 celery stalk
1 inch ginger



health fact!

Leafy greens have very little carbohydrates in them, and the carbs that are there are packed in layers of fiber, which make them very slow to digest.

**SPINACH SPARKLE**

6 spinach leaves
2 apples
1 lemon
dash of tonic water

VAMPIRE'S DELIGHT

4 tomatoes
2 apples
1 beet
ginger to taste

CUCUMBER CURE

1 cucumber
1 spinach leaf
6 carrots



health fact!

Tomato Juice is very low in saturated fat and cholesterol. It is also a good source of vitamin k, thiamin, niacin, pantothenic acid, iron, magnesium, copper and manganese.

CUSTOMER SUPPORT

If your device fails to function as required, please check the troubleshooting checklist on bydash.com. There may only be a minor problem that you can solve yourself.

For product support, warranty and maintenance related questions (other than cleaning) please contact StoreBound directly at: 1-800-898-6970 from 7AM to 7PM PST, Monday - Friday, or by email at info@storebound.com.

REPAIRS

DANGER! Risk of electric shock! The Dash Premium Juicer is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Care at 1-800-898-6970 regarding repairs to the device.



TECHNICAL SPECIFICATIONS

| | |
|--------------|-------------|
| Model Number | JB001CM |
| Voltage | 120V - 60Hz |
| Power Rating | 800 Watts |

WARRANTY

STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound will repair or replace the defective part. To process a warranty claim, contact Customer Care at 1-800-898-6970 for further assistance and instruction. A customer care agent will conduct troubleshooting in an attempt to fix any minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send All Inquires To: info@storebound.com

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.



STOREBOUND™

STOREBOUND MAKES PRODUCTS
THAT MAKE PEOPLE'S LIVES HAPPIER,
HEALTHIER, AND EASIER.

IF YOU'VE GOT A GREAT IDEA FOR A
PRODUCT, WE WANT TO HEAR ABOUT IT.
GO TO OUR WEBSITE AT STOREBOUND.COM

© 2013 by StoreBound
StoreBound LLC, New York, NY 10038

[visit bydash.com](http://visit.bydash.com)

Patent Pending